


INSTRUCTIONS FOR ASSEMBLING MODEL NOS. 1700 and 1703 SPINNER HAT RACK DISPLAYS

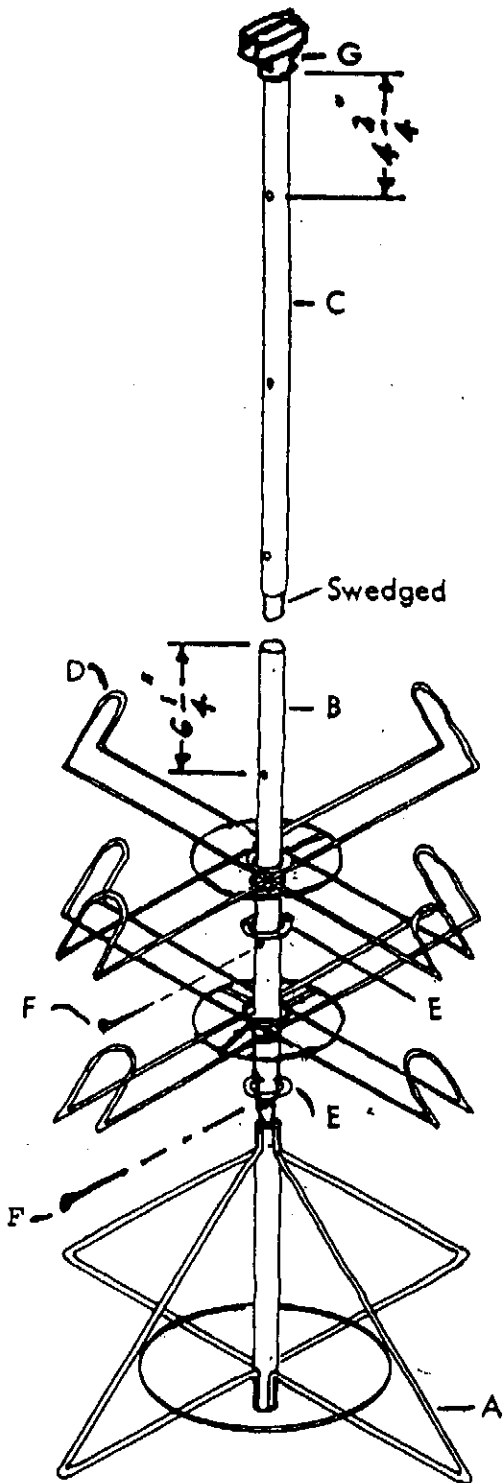

<u>PART NO.</u>	<u>NO. REQUIRED</u>	<u>DESCRIPTION</u>
A	1	Base
B	1	Bottom tube
C	1	Top tube
D	6	Hat tier
E	6	Washer
F	6	Cotter pin
G	1	Card holder

1. Note the difference between the top and bottom tubes. With the swaged end facing the floor, the top hole is located 4 1/4" and 6 1/4" from the top end on the top and bottom tube, respectively.
2. Place the swaged end of the bottom tube (B) into the tube connected to the base (A) and rotate clockwise until the tubes lock in place. Place a cotter pin (F) through the bottom hole (through both walls) and bend apart to prevent the cotter pin from falling out in service. Drop washer (E) and hat tier (D) over the open end of the tube and rest on the cotter pin. Repeat with two (2) more cotter-pins, washers, and hat tiers.
3. Insert the top tube (C) into the bottom tube and rotate clockwise until the tubes lock in place. Assemble the remaining three cotter pins, washers and hat tiers as outlined in Step 2 above.
4. Place card holder (G) over the top tube.

1599902
E
1599904